



# Imago


Mod.  
1707

DS 1707-001

LBT 8281

## IMAGO HANDS-FREE VIDEO DOOR PHONE

Sch./Ref. 1707/1

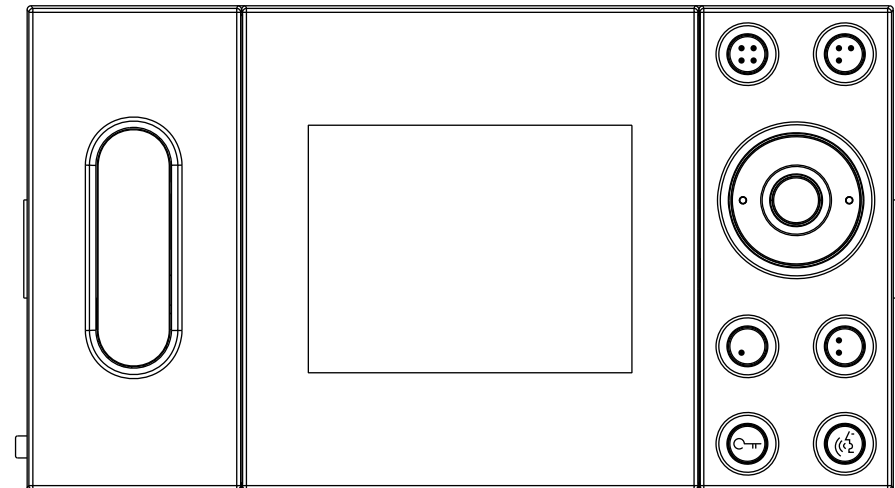

**URMET DOMUS COMMUNICATION  
AND SECURITY UK LTD**


Urban Hive, Skyline 120, Avenue West, Great Notley, Essex CM77 7AA

Telephone: 01376 556010 Fax: 01376 567874 email: sales@urmet.co.uk web: www.urmet.co.uk

**urmet**  
IS IN YOUR LIFE




# ENGLISH

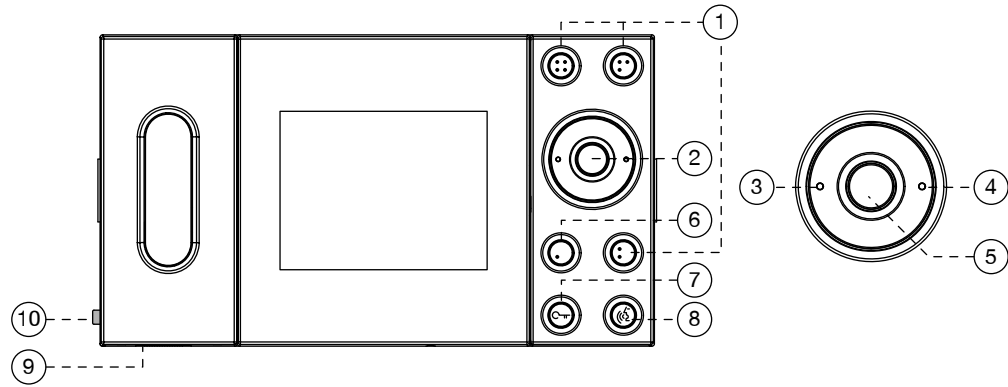

- ① **AUXILIARY BUTTONS:** these can be used for specific functions according to the system.
- ② **JOYSTICK:** this is used to adjust the video parameters.
- ③ The left joystick button is used to decrease video parameters.
- ④ The right joystick button is used to increase video parameters.
- ⑤ **SELECT:** This button is used to select the video parameter to be adjusted.
- ⑥ **AUTO-ON BUTTON**
- ⑦ **DOOR OPENER BUTTON:** This turns green when the video door phone is on. It turns red to indicate that the door is open and blinks red to indicate that the automatic door opening function is on.
- ⑧ **AUDIO BUTTON:** This turns green when the video door phone is on. The button will turn amber when the audio button is pressed. The button does not need to be held pressed during the conversation ("FREE-HANDS" function). The audio conversation is cut off when either the button is pressed again or when the video door phone is switched off. The free-hands function can be excluded by the installer on some system types.

## ⑨ CALL VOLUME/MUTE CONTROL

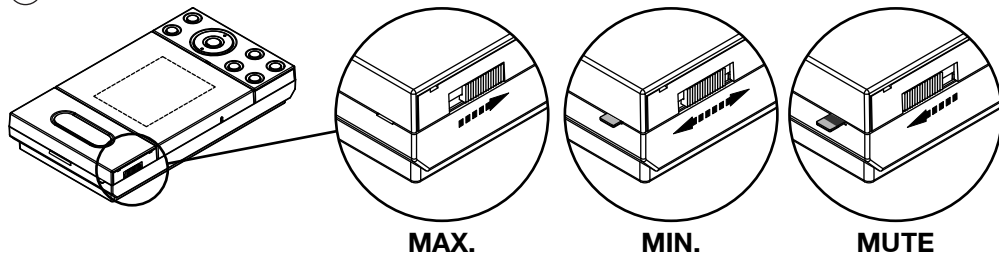


- ⑩ **MUTE INDICATOR:** A tab protrudes from the left-hand side of the video door phone when the volume is muted.

## CONTRAST, BRIGHTNESS, COLOUR ADJUSTMENT

These video parameters can be adjusted only when the video door phone is on, after receiving a call or selecting the auto-on function.

- Use the joystick button (2) to access the setting menu.
- Press the right button (4) to increase and the left button (3) to decrease.
- Press the **SELECT** (5) to go to the next parameter in the following sequence:

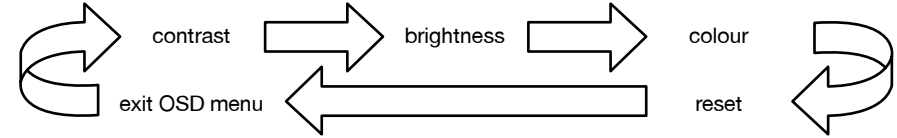

The **RESET** is used to return all parameters to the initial condition. Press either the right or the left button of the joystick to reset the parameters. Press the middle button to exit the setting menu. The changes will not be stored if the video door phone goes out before exiting setting mode.